





# Installation Guide




**Deco**  
KBA1201




**Deco**  
KBA1202



**Deco**  
KBA1203




**Deco**  
KBA1204




**Deco**  
KBA1205




**Deco**  
KBA1206



**Deco**  
KBA1207



**Deco**  
KBA1208



**Deco**  
KBA1209

## Installation Considerations

These products should be located and mounted to a wall stud. While it is possible to mount them to any surface, a stud mounted product will yield the best results.

Keep this booklet and the receipt (or other proof of date and place of purchase) for this product in a safe place. The receipt is required should it be necessary to request warranty parts.

**Please keep the box and packaging materials until your product is completely installed.**

## SAFETY TIPS


### ⚠ **WARNING!**

This item is not designed for use as a grab bar. Do not mount in locations where product is likely to be used as a grab bar.


### ⚠ **WARNING!**

Use caution when drilling into walls to avoid drilling into electrical and plumbing lines hidden within wall.


## Tools you may need



Electric drill




Hammer




Phillips screwdriver



Pencil




Tape measure



Level




1/8 in. drill bit  
1/4 in. drill bit  
5/16 in. drill bit




Silicone sealant

**1** For all installations.

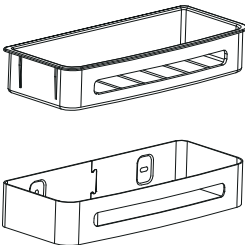


Remove the ABS part from the product.

**2** Front basket.

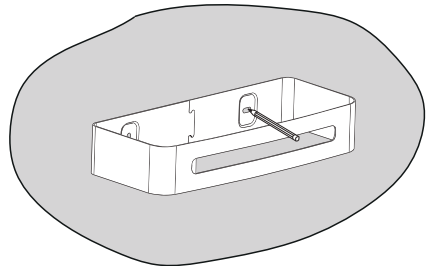


Using the basket as a template, mark the positions of the screw holes.

**3** For corner basket.

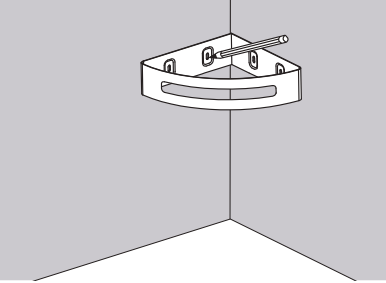


Using the basket as a template, mark the positions of the screw holes.

**4** For Ceramic Tile.

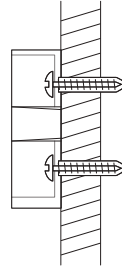


Drill 1/4" pilot holes and insert the plastic anchors into drilled holes using a hammer to tap the anchors flush with wall. Secure the basket.

**5** For drywall into Studs.

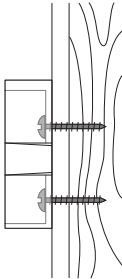

Drill 1/8" holes, secure the basket.


**6** For drywall Between Studs.

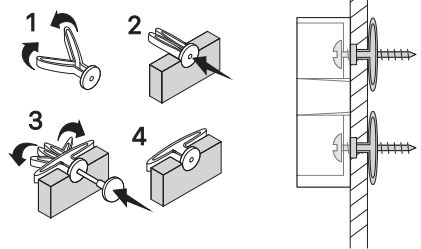

Drill 5/16" holes, Use the anchors to secure the basket.


**Note: Anchors is not provided.**

**7** For front basket.

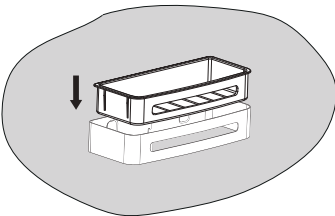


Put the ABS part into the basket accordingly.

**8** For corner basket.

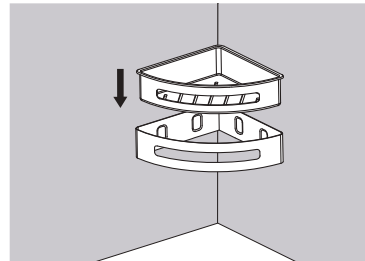

Put the ABS part into basket accordingly.


9 For KBA1207, KBA1208, KBA1209.

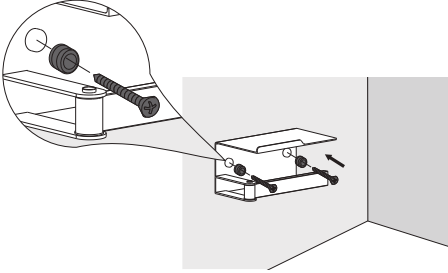

Screws go through the nuts and screw the product onto the wall.

**Note: screw, nuts with caps are in the installation part package.**

10 For KBA1207, KBA1208, KBA1209.

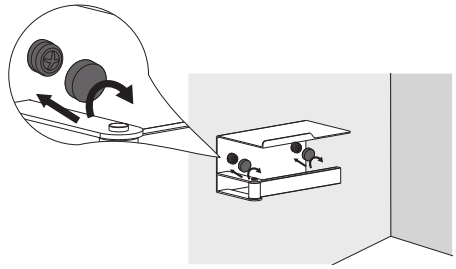

Tighten the decoration cap onto the nuts after fix the products.

### Cleaning Instructions:

To maintain and protect the fine luster of all bath accessories, clean with a soft, damp cloth only. DO NOT USE scrub pads, detergents or cleansers as they may harm the protective finish of your bath accessories.

Damage to the product caused by improper care or the use of improper cleaning agents is not covered by the warranty.

### Warranty:

Warranted to be free from manufacturing defects for a period of one (1) year from the date of purchase.